



CMF-19040-1200mm Microfiltration

Ceramfil® INORGANIC CERAMIC MEMBRANE

PRODUCT DESCRIPTION

Model : CMF19040-OD30
 Serial number: 92021
 Raw Material: α -Alumina/Zirconia
 Pore size: 50nm
 Construction: Multi-channel tubular element
 Major Applications: Clarification, Liquid-solid separation, Wastewater treatment

MEMBRANE AREA

AREA 0.29 m²


OPERATING & DESIGN INFORMATION

Typical Operating Pressure: 29-145 psi (2-10 bar)
 Maximum Operating Temperature: 302°F (150°C)
 Maximum Cleaning Temperature: 176°F (80°C)
 Allowable pH - Continuous operation: 0-14
 Allowable pH - Clean-In-Place (CIP): 0-14
 Solvent stability: Unaffected due to different seals

FLUX DATA

Pure water flux: 600-700 l/m².h.bar
 Element water flux: 174-203 LPH
 Test Conditions: 14 psi (1bar), 86°F (25°C). pure water

PRODUCT DIMENSIONS

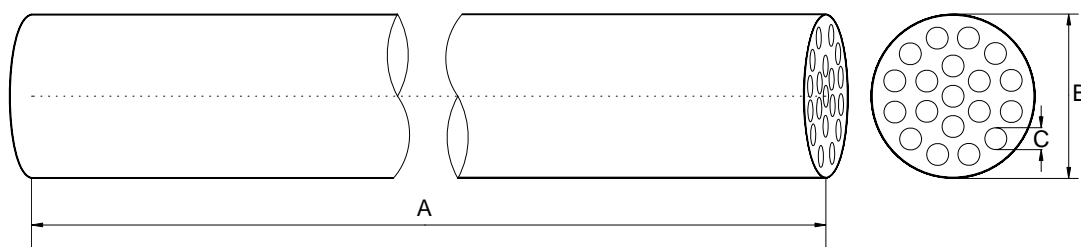

	A	B	C		
	Total length	Outside diameter	Channel Diameter	Channel Qty	Gross Weight
OD30-19040	1200mm	30mm	4.0mm	19	1.70kg

Ceramfil® INORGANIC CERAMIC MEMBRANE

Membrane Characteristics:

Ceramfil® ceramic membrane in a tubular multi-channel configuration, with superior acid & alkaline and solvent stability.

Operating Limits:

Operating Pressure: Maximum operating pressure for **Ceramfil**® MF membrane is 145 psi (10bar). Actual operating pressure is dependent upon system flux rate, as well as feed viscosity, CP and temperature conditions.

Maximum back Pressure: 87 psi (6.0 bars).

Temperature: Maximum operating temperature is 302°F (150°C). Temperature change should not exceed 10°C per minute.

PH: Allowable range for continuous operation is 1-14.

Prefilter for membrane: Screen filter of 30 mesh or paper filter

Feed Flow Rate: To acquire a lowest fouling on membrane layer and prevent the channel blocked, a minimum cross flow recirculation velocity is necessary due to liquid of different viscosity:

	min(m ³ /h)	max (m ³ /h)
OD30-19040	3.8	6.5

Actual feed flow rate is dependent feed characteristics (Viscosity, TS, and Temperature

etc), fouling tendency, concentrate parameter and system design. For more details about this please consult with JIUWU for technical support.

Membrane Handling:

Recommended cleaners for recovering membrane: Depending on the nature of the feed material, a choice can be made from the following cleaning agents:

Acid Cleaner: 1-3%HNO₃, 1%H₃PO₄, Oxalic acid, 112°F (50°C)

Alkaline Cleaner: 1-3%NaOH, Na₃PO₄, NaClO, 112°F (50°C)

Chelate Reagent: EDTA

Surfactant: SDS

Enzyme Reagent: Amylase, Protease

Consult JIUWU for more information on cleaning to Ceramic membrane.

Lubricants: For element installation, use only water or glycerin to lubricate seals. The use of petroleum or vegetable-based oils or solvents may cause fouling on membrane.

Storage: The membrane should be stored after cleaning.

Service and Ongoing Technical Support

JIUWU HITECH has an experienced staff of professionals available to assist you to optimize existing systems and support with the development of new applications. We have a comprehensive product development program to ensure the availability of state-of-the-art products. JIUWU will provide knowledgeable assistance whether it is staff training, review of system operations, or recommendations for fine tuning your system.

The information contained in this publication is believed to be accurate and reliable, but is not to be construed as implying any warranty or guarantee of performance. We assume no responsibility, obligation or liability for results obtained or damages incurred through the application of the information contained herein. Refer to Standard Terms and Conditions of Sale and Performance Warranty documentation for additional information.

JIANGSU JIUWU HITECH CO., LTD

Address: No.9 Huqiao East road, Jiangpu sub-district, Pukou district, Nanjing city, Jiangsu
211808 China

Tel: 0086 25 58109595 Fax: 0086 25 58209595

Http:// www.jiuwu.com

Email: claireding@jiuwu.com